


# AY04 Installation Diagram

Support to adjust the SWR by up and down the distance ①

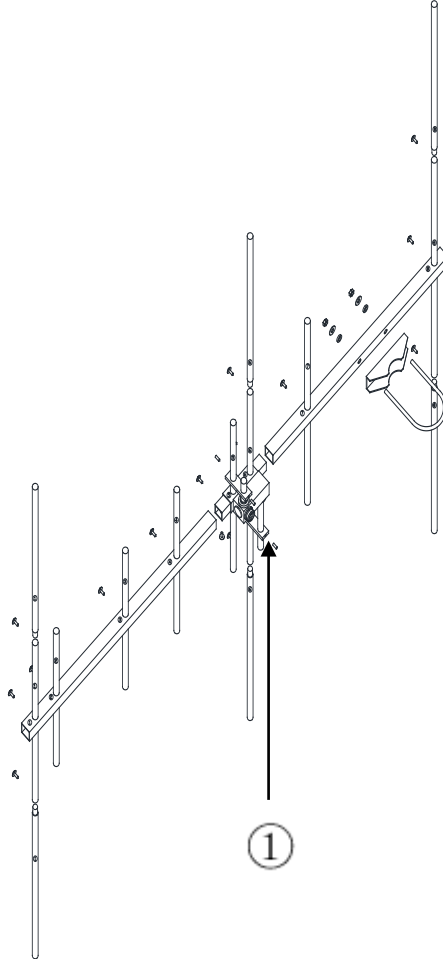

## Note:

- 1、 Don't cote it any paint to prevent interference with transmission and reception.
- 2、 AY04 is a horizontal directional transmission. It can be used at an elevation Angle for environmental needs.