

Significant change in GPS Feature

A setting that enables the FT-991 to obtain and display position information in real time has been added to MENU item “028 GPS/232C SELECT” of the MENU MODE.

MENU MODE instruction item “028 GPS/232C SELECT” has also been changed as follows:

028 GPS/232C SELECT

Function: Selects functions of the GPS/CAT jack.

Available Values: GPS1 / GPS2 / RS232C

Default Setting: GPS1

Description: Select the device that is to be connected to the GPS/CAT jack on the rear panel.

GPS1: Enables connection to an external GPS device.

GPS2: Enables connection to an external GPS device, and displays the location information in real time.

RS232C: Enables connection for input of CAT commands.

When the GPS2 selection is added to MENU 028, “Using the GPS Function” operation as described in the FT-991 Operating Manual (page 112) will be changed as follows:

Displaying the Current Station Position Information

When Menu Item “028 GPS/232C SELECT” is set to “GPS1”

1. Press and hold the **MENU(SETUP)** button.
2. Touch [**LAT/LON**] on the LCD.
3. Touch [**GPS**] on the LCD.

The latitude and longitude of this station will be displayed.

When Menu Item “028 GPS/232C SELECT” is set to “GPS2”

1. Press and hold the **MENU(SETUP)** button.
2. Touch [**LAT/LON**] on the LCD.

The latitude and longitude of this station will be displayed in real-time.

Entering the Location Information Manually

The manually registered location information can be erased by touching and holding [**LAT**] / [**LON**] on the LCD for one second.

Note: When the [**LAT**] (Latitude) and [**LON**] (Longitude) information is not registered, you will not be able to send location information to the other stations.